MONSTER®

CLARITY HD MICRO™

HIGH-POWERED WIRELESS SPEAKER AND SPEAKERPHONE

HAUT-PARLEUR SANS FIL-POWERED ET HAUT-PARLEUR

Instructions and Warranty Information

Download the complete manual at: MonsterProducts.com/products/clarityhdmicro

Instructions et informations relatives à la garantie

Téléchargez le manuel complet à : MonsterProducts.com/products/clarityhdmicro

Top / Dessus / Oben / Parte superior

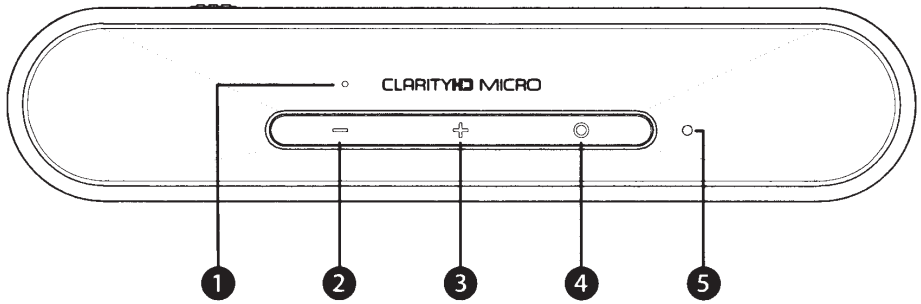

Front / Avant / Vorderseite / Parte frontal

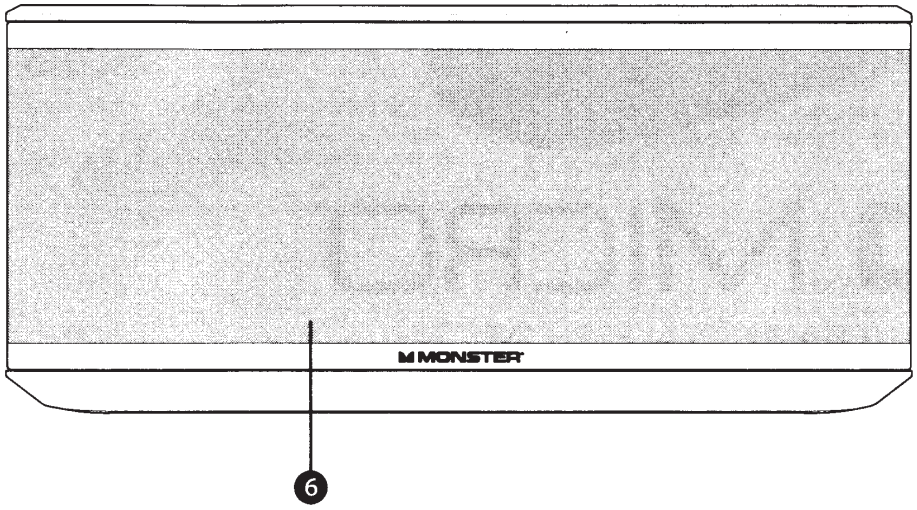

Back / Arrière / Rückseite / Parte trasera

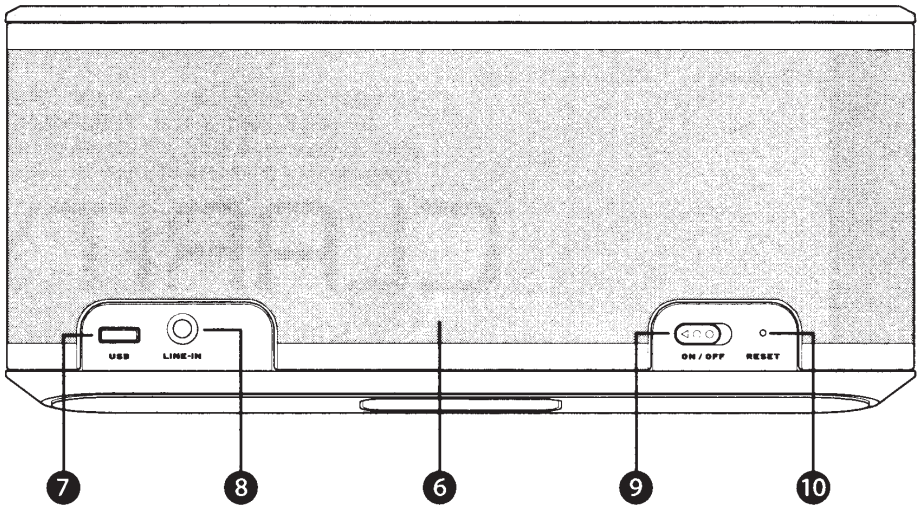

ENGLISH

Micro Features and Controls

1. **Built-in microphone**
   For voice commands/speakerphone use
2. **Volume down button**
   Decreases volume when pressed
3. **Volume up button**
   Increases volume when pressed
4. **Multi-function button**
   Activates voice command and pairing mode
5. **LED Indicator light**
   Indicates mode and function of Micro
6. **Removable front and rear grilles**
   Optional grilles available at MonsterProducts.com/products/clarityhdmicro
7. **USB port**
   Connect to power adapter with USB micro cable to charge Micro
8. **Line In jack**
   Connect device to Micro with 3.5mm cable
9. **Power switch**
   Turns Micro ON/OFF
10. **Recessed reset button**
    Use paper clip to press in the event of a system lockup

FRANÇAIS

Caractéristiques et commandes de Micro

1. **Microphone intégré**
   Pour commande vocale/utilisation haut-parleur
2. **Touche volume (–)**
   Appuyer pour baisser le volume
3. **Touche volume (+)**
   Appuyer pour augmenter le volume
4. **Touche multifonctions**
   Active la commande vocale et le microphone
5. **Voyant lumineux LED**
   Indique le mode et le fonctionnement de Micro
6. **Grilles escamotables avant et arrière**
   Grilles optionnelles disponibles sur le site MonsterProducts.com/products/clarityhdmicro
7. **Port USB**
   Pour charger Micro, branchez un adaptateur d'alimentation à l'aide d'un câble micro USB
8. **Entrée audio**
   Connecter l'appareil à Micro avec un câble 3,5 mm
9. **Interrupteur d'alimentation**
   Positionne Micro sur MARCHE/ARRÊT
10. **Bouton de redémarrage**
    Utiliser un trombone en cas de blocage du système

DEUTSCH

Micro Features und Steuerelemente

1. **Eingebautes Mikrofon**
   Für Sprachbefehle/Lautsprechertelefon
2. **Leiser-Taste**
   Verringert die Lautstärke
3. **Lauter-Taste**
   Erhöht die Lautstärke
4. **Multifunktionstaste**
   Aktiviert den Sprachbefehl- und Paarmodus
5. **LED-Leuchtanzeige**
   Zeigt den Modus und die Funktion des Micro an
6. **Abnehmbares Gitter an der Vorder- und Rückseite**
   Optionale Gitter sind unter MonsterProducts.com/products/clarityhdmicro
7. **USB-Port**
   Schließen Sie das Gerät mit dem USB-Mikrokabel am Stromadapter an, um den Micro aufzuladen
8. **Eingangsbuchse**
   Schließen Sie das Gerät mit dem 3,5 mm Kabel am Micro an
9. **Netzschalter**
   Schaltet den Micro EIN/AUS
10. **Versenkte Reset-Taste**
    Verwenden Sie eine Büroklammer, um die Taste zu drücken, wenn das System nicht mehr reagiert

ESPAÑOL

Funciones y controles de Micro

1. **Micrófono integrado**
   para comandos de voz/uso del altavoz telefónico
2. **Botón para bajar el volumen**
   Baja el volumen cuando se pulsa
3. **Botón para subir el volumen**
   Sube el volumen cuando se pulsa
4. **Botón multifunción**
   Activa los comandos de voz y el modo de emparejamiento
5. **Luz indicadora LED**
   Indica el modo y función de Micro
6. **Rejillas frontal y trasera desmontables**
   Rejillas opcionales disponibles en MonsterProducts.com/products/clarityhdmicro
7. **Puerto USB**
   Conexión al adaptador de corriente con micro cable USB para cargar Micro
8. **Conector de entrada de línea**
   Conexión de dispositivo a Micro con un cable de 3,5 mm
9. **Interruptor de encendido**
   Enciende/apaga Micro
10. **Botón de reinicio encastrado**
    Utiliza un clip para pulsarlo en caso de bloqueo del sistema

Package Contents / Contenu de l'emballage / Paketinhalt / Contenido del paquete

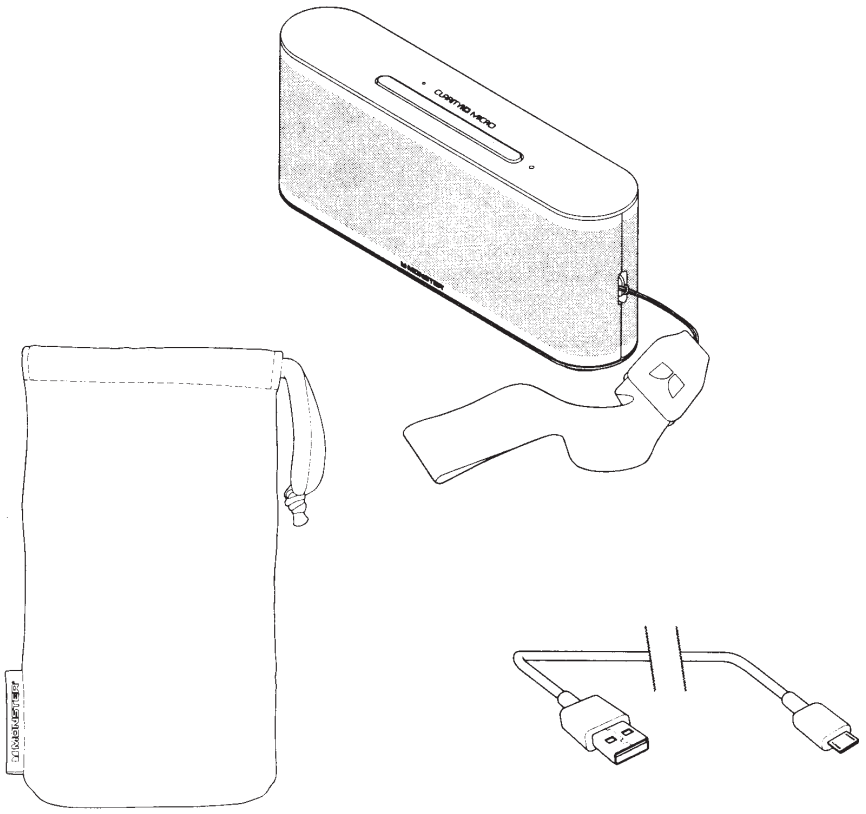

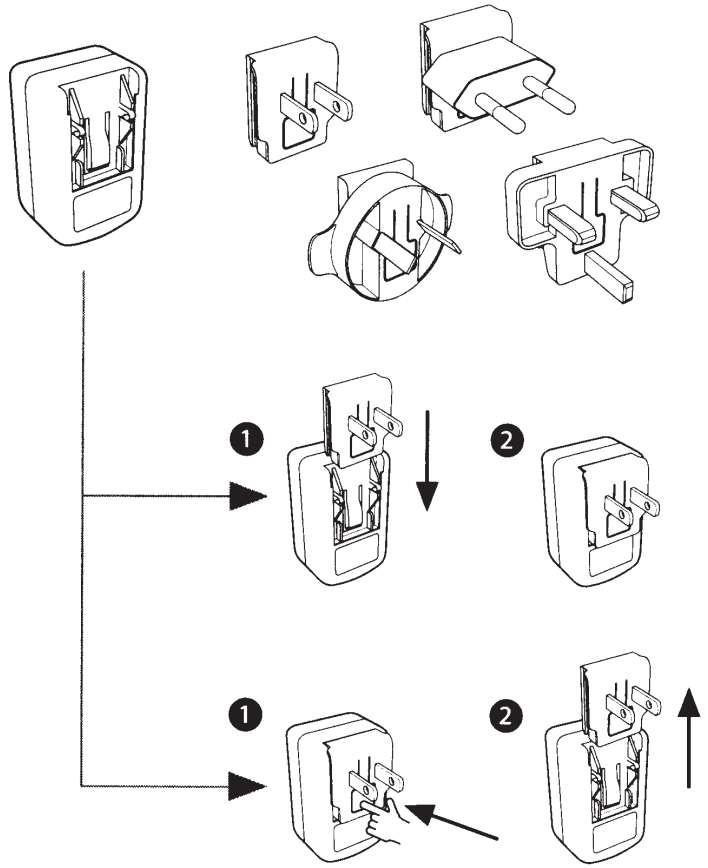

ENGLISH

COMPATIBILITY

Wireless

Devices with *Bluetooth*® 2.0 wireless technology or above (See General Specifications for profiles), such as *Bluetooth* wireless technology equipped computers, and most *Bluetooth* wireless technology equipped smartphones and MP3 players.

Wired

Devices with a standard 3.5 mm headphone output port via 3.5 mm minijack cable (not included).

SAFETY

Do not leave the product exposed to a heat source or high temperatures.

Do not remove or attempt to remove the non-user-replaceable battery. When disposing of the product, take it to a waste electronics service.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire, or the like.

Caution: Danger of explosion if battery is incorrectly replaced. Batteries must be recycled or disposed of properly.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC ID: RJE173209-00

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modification not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment. Connecting of peripherals requires the use of grounded shielded signal cables. The socket-outlet shall be installed near the equipment and shall be easily accessible.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's (or your) authority to operate the equipment.

Avoid storage in extreme heat or cold. Avoid exposure to liquids, temperature extremes and high humidity. The product's working temperature range is 0–45°C (32–113°F).

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

OPERATION

Turn It On

Charging

Monster Micro comes with a lithium-ion battery. For best results, fully charge the Micro before use.

To charge, connect the USB micro cable to the power adapter. Four sets of plug prongs are included for worldwide use. Connect appropriate prongs to adapter and connect to USB cable Monster Micro.

Charging Indicator Lights

Battery Low—Solid Red

Battery Very Low—Flashing Red

Battery Charging—Flashing Blue

Fully Charged—LED Off (power OFF), Solid Blue (Power ON)

Power Switch

Slide the switch to the ON position to turn on the Micro.

Multifunction Button

Use the Multifunction Button to enable voice control, set up *Bluetooth* wireless pairing, play/pause music, and other functions. For complete Multifunction button instructions, go to **MonsterProducts.com/products/clarityhdmicro**.

CONNECT

Connecting via *Bluetooth* Wireless Technology

If you are pairing the Micro and a *Bluetooth* wireless technology enabled device for the first time, follow these steps:

1. Press and hold down the Multifunction Button.
2. Enable *Bluetooth* wireless technology on device.
3. Select "Monster Micro" on your *Bluetooth* wireless enabled device.

When the Micro is turned on, it automatically searches for the last *Bluetooth* device to which it was paired.

Connecting via Wire

Use a 3.5 mm cable to connect device to the Line In jack on the back of the Micro.

VOICE COMMANDS

Follow these steps to activate voice commands:

1. Slide the switch to the ON position to turn on the Micro.
2. By default, the Micro is not in voice command mode when you turn it on. Press and hold Volume Up and Volume Down buttons simultaneously to enable voice command features.
3. After the Micro connects to your device, Micro will say, "Your device is connected".
4. Say the trigger word—"Hello Monster Micro".
5. The Micro will respond with the prompt "Say a command".

For a complete list of voice commands, go to **MonsterProducts.com/products/clarityhdmicro**.

LISTEN TO MUSIC

Play/Pause
Multifunction Button—Short press

When connected via *Bluetooth* wireless technology, control the music from your device.

USE AS SPEAKERPHONE

Incoming Call

Answer Call
Multifunction Button—Short press

Reject Call
Multifunction Button—Long press

During Call

Hang Up
Multifunction Button—Short press

Toggle Between Mobile Device and Micro
Multifunction Button—Long press

Answer 3rd Party Call/Put Original Call on Hold
Multifunction Button—Double press

Mute Microphone
Volume Up and Volume Down Buttons—Short press both buttons simultaneously

Limited Warranty for Consumers

Monster, LLC, 7251 West Lake Mead Blvd., Las Vegas, NV 89128, USA, **[PLEASE NOTE THAT MONSTER DOES NOT ACCEPT PRODUCTS SHIPPED TO THIS ADDRESS—FOLLOW INSTRUCTIONS IN "HOW TO MAKE A CLAIM" BELOW]** (415) 840-2000 ("Monster") extends You this Limited Warranty. Statutory or common law may provide You with additional rights or remedies, which shall not be affected by this Limited Warranty.

DEFINITIONS

"Adequate Use" means use of the Product (i) within a home or dwelling, (ii) for private (as opposed to commercial) purposes, (iii) in conformance with all applicable law, code or regulations (including without limitation building and/or electrical codes), (iv) in accordance with manufacturer recommendations and/or instructions in the materials and documentation that accompany the Product, and (v) if applicable, with proper electrical grounding.

"Authorized Dealer" means any distributor, reseller or retailer that (i) was duly authorized to do business in the jurisdiction where it sold the Product to You, (ii) was permitted to sell You the Product under the laws of the jurisdiction where You bought the Product, and (iii) sold You the Product new and in its original packaging.

"Formal Warranty Claim" means a claim made in accordance with the section "Formal Warranty Claims" herein.

"Product" means a Product (i) that is listed in the Specifications Table below, (ii) that You bought from an Authorized Dealer new and in its original packaging, and (iii) whose serial number, if any, has not been removed, altered, or defaced.

"Product Defect" means an inadequacy of the Product that existed at the time when You received the Product from an Authorized Dealer and that causes a failure of the Product to perform in accordance with Monster's documentation accompanying the Product, unless such failure has been caused completely or partly by (a) any use other than Adequate Use, (b) transportation, neglect, misuse or abuse by anyone other than Monster's employees; (c) alteration, tampering or modification of the product by anyone other than a Monster employee; (d) accident (other than a malfunction that would otherwise qualify as a Product Defect); (e) maintenance or service of the Product by anyone other than a Monster employee; (f) exposure of the Product to heat, bright light, sun, liquids, sand or other contaminants; or (g) acts outside the control of Monster, including without limitation acts of God, fire, storms, earthquake or flood.

"Warranty Period" means the time period during which Monster must have received Your Formal Warranty Claim. The different Warranty Periods related to Product Defects are defined in the Specifications Table below. The Warranty Period commences on the date when You purchased or received (whichever occurs later) the Product from an Authorized Dealer as evidenced by the Authorized Dealer's invoice, sales receipt or packing slip. If You do not have written proof of the date of purchase or receipt, then the Warranty Period commences three (3) months after the date when the Product left Monster's or its factory as evidenced by Monster's records. The Warranty Period ends after the time defined in the Specifications Table has expired or after You have transferred ownership of the Product, whichever occurs earlier. Also, You must call Monster and obtain a Return Authorization Number (as described under "How to Make a Claim") within two (2) months after You discover a Product Defect (or should have discovered it, if such Product Defect was obvious).

"You" means the first individual person that purchased the Product in its original packaging from an Authorized Dealer. This Limited Warranty does not apply to persons or entities that bought the Product (i) in used or unpackaged form, (ii) for resale, lease or other commercial use, or (iii) from someone other than an Authorized Dealer.

SCOPE OF THIS LIMITED WARRANTY

PRODUCTS. If a Product contained a Product Defect when You bought it from an Authorized Dealer and Monster receives a Formal Warranty Claim from You within two (2) months after You discover such Product Defect (or should have discovered it, if such Product Defect was obvious) and before the end of the Warranty Period for Product Defects applicable to the affected Product, then Monster will provide You with one of the following remedies: Monster will (1) repair or, at Monster's sole discretion, replace the Product, or (2) refund to You the purchase price You paid to the Authorized Dealer for the affected Product if repair or replacement is not commercially practicable or cannot be timely made. NOTE: MONSTER DOES NOT ASSUME ANY LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES UNDER THIS LIMITED WARRANTY.

GENERAL PROVISIONS

CHOICE OF LAW/JURISDICTION. This Limited Warranty and any disputes arising out of or in connection with this Limited Warranty ("Disputes") shall be governed by the laws of the jurisdiction where You bought the Product.

OTHER RIGHTS. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM JURISDICTION TO JURISDICTION, AND WHICH SHALL NOT BE AFFECTED BY THIS LIMITED WARRANTY. THIS WARRANTY EXTENDS ONLY TO YOU AND CANNOT BE TRANSFERRED OR ASSIGNED. If any provision of this Limited Warranty is unlawful, void or unenforceable, that provision shall be deemed severable and shall not affect any remaining provisions. In case of any inconsistency between the English and other versions of this Limited Warranty, the English version shall prevail.

REGISTRATION. Please register Your Product at www.MonsterProducts.com. Failure to register will not diminish Your warranty rights.

SPECIFICATIONS TABLE

Product Model	Warranty Period for Product
Product that accompanies this warranty statement	One (1) year for product sold in North America, South America and Asia Two (2) years for product sold in Europe

FORMAL WARRANTY CLAIM

HOW TO MAKE A CLAIM. In the event damage has occurred to Products, You must follow these instructions: (1) Call Monster within two (2) months after You discover a Product Defect (or should have discovered it, if such Product Defect was obvious); (2) Give a detailed explanation of how the damage occurred; (3) Obtain a Return Authorization Number; (4) Return the Products, shipping prepaid by You (to be refunded if You are entitled to a remedy under the Scope of this Limited Warranty), to Monster for verification of damage, along with a copy of **Your**

original sales receipts and proof of purchase (UPC label or packing slip) for such Products, the completed claim form, and printed Return Authorization Number on the outside of the return package (the claim form will include instructions for return).

TELEPHONE NUMBERS. If You bought the Product in the United States, Latin America (Mexico 011-882-800-8989), or Asia Pacific (China 400-820-8973), contact Monster, LLC (455 Valley Drive, Brisbane, CA 94005) at 1 877 800-8989. If You bought the Product anywhere else, contact Monster Technology International Ltd., Ballymaley Business Park, Ennis, Co. Clare, Ireland. You can write or use one of the following telephone numbers: Canada 866-348-4171, Ireland 353 65 68 69 354, Austria 0800296482, Belgium 0800-79201,Czech Republic 800-142471, Denmark 8088-2128, Finland 800-112768, France 0800-918201, Germany 0800-1819388, Greece 00800-353-12008, Italy 800-871-479, Netherlands 0800-0228919, Norway 800-10906, Russia 810-800-20051353, Spain 900-982-909, Sweden 020-792650, Switzerland 0800834659, United Kingdom 0800-0569520.

FURTHER PROCEEDINGS. Monster will determine whether a Product Defect existed. Monster may, at its discretion, direct You to obtain a repair estimate at a service center. If a repair estimate is required, You will be instructed on how to properly submit the estimate and the resulting invoice to Monster for payment. Any fees for repairs may be negotiated by Monster.

TIMING. If You bring a Formal Warranty Claim and fully comply with all terms and conditions of this Limited Warranty, Monster will use its best efforts to provide You with a remedy within thirty (30) days after receipt of Your Formal Warranty Claim (if You reside in the United States—forty-five (45) days if You reside elsewhere), unless obstacles outside Monster's control delay the process.

Ver.071311—GLOBAL ©2012 Monster, LLC

FRANÇAIS

COMPATIBILITÉ

Sans fil

Appareils avec technologie sans fil *Bluetooth*® 2.0 ou supérieure (voir les spécifications générales pour les profils) tels que les ordinateurs équipés de cette technologie, ainsi que la plupart des smartphones et lecteurs MP3.

Câblé

Appareils équipés d'une sortie audio standard 3,5 mm via un câble avec prise 3,5 mm (non inclus).

SÉCURITÉ

Ne pas exposer l'appareil à une source de chaleur ou à une haute température.

Ne pas retirer ou tenter de retirer la batterie, qui n'est pas remplaçable par l'utilisateur. Lors de la mise au rebut du produit, le déposer dans un centre de collecte des déchets électroniques.

Ne pas exposer cet appareil au ruissellement ou à des éclaboussures et ne pas poser dessus d'objets contenant des liquides, tels que des vases.

Ne pas exposer les batteries (bloc pile ou batteries installées) à une chaleur excessive telle que l'ensoleillement direct, un feu ou toute autre source de chaleur.

Avertissement : Danger d'explosion si la batterie n'est pas remplacée correctement. Les batteries doivent être recyclées ou mises au rebut en veillant à respecter l'environnement.

Informations relatives à l'élimination de ce produit. Ce symbole indique que ce produit doit être éliminé conformément aux prescriptions légales en vigueur dans l'UE et séparé des déchets domestiques. Le tri et le recyclage permettent de protéger les réserves de matières premières et garantissent le respect de toutes les dispositions relatives à la protection de la santé et de l'environnement dans le cadre du recyclage. Pour mettre au rebut votre produit, utiliser les systèmes de retour ou de collecte disponibles ou contacter le vendeur du produit afin que le produit soit recyclé en veillant à respecter l'environnement.

FCC ID: RJE173209-00

Cet appareil est conforme à la réglementation de la FCC, Section 15. Son utilisation doit répondre aux deux conditions suivantes : (1) Cet appareil ne doit pas émettre d'interférences préjudiciables et (2) Cet appareil doit accepter toute interférence reçue, y compris celles risquant d'entraîner un fonctionnement préjudiciable. Tout changement ou modification non expressément approuvée par la partie responsable de la conformité est susceptible d'entraîner l'annulation de l'autorisation d'utilisation de l'appareil pour l'utilisateur. La connexion de périphériques nécessite l'utilisation de câble isolés et mis à la terre. La prise d'alimentation doit être installée à proximité de l'équipement et rester facilement accessible.

Note

Cet appareil a été testé et déclaré conforme aux limites pour un appareil numérique de classe B, en application de la réglementation de la FCC, Section 15. Ces limites sont définies de manière à fournir une protection suffisante contre des interférences nuisibles dans une installation résidentielle. Cet appareil génère, utilise et peut produire de l'énergie radioélectrique et, en cas d'installation non conforme aux instructions, peut provoquer un brouillage préjudiciable aux radiocommunications. Rien ne peut cependant garantir qu'aucune interférence ne puisse se produire dans une installation particulière. Si cet appareil provoque un brouillage préjudiciable à la réception de la télévision ou de la radio, ce qui peut être vérifié en l'allumant et en l'éteignant, il est conseillé de corriger cette situation en appliquant une ou plusieurs des mesures suivantes :

- Réorienter ou repositionner l'antenne de réception.
- Augmenter la distance entre l'appareil et le récepteur concerné.
- Brancher l'appareil à une alimentation appartenant à un circuit différent de celui du récepteur concerné.
- Demander conseil au revendeur ou à un technicien spécialisé en radio/télévision.

Avertissement

Toute modification non expressément approuvée par la partie responsable de la conformité est susceptible d'entraîner l'annulation de l'autorisation d'utilisation de l'appareil pour l'utilisateur (ou vous-même).

Éviter de conserver au froid ou à une chaleur intense. Éviter d'exposer à des liquides, à des températures extrêmes et à une humidité élevée. Température de fonctionnement : 0–45°C (32–113°F).

Industry Canada

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

"产品缺陷" 是指您在从授权经销商处购得产品时其具有的，使其无法按照产品附带的Monster的文件正常运行的缺陷，除非该缺陷是全部或部分由以下原因造成（a）非适当使用，（b）由于Monster员工以外的人的运输、疏忽、不当使用或者滥用；（c）由于Monster员工以外的人对产品的修改、篡改或改造；（d）意外事故（符合产品缺陷条件的故障除外）；（e）由于Monster员工以外的人对产品的维护或服务；（f）将产品置于高温、强光、日晒、液体、沙尘或其他污染物中，或（g）Monster无法控制的事由，包括但不限于不可抗力、火灾、暴风雨、地震或洪水。

"保修期限" 是指Monster应当已经收到您的正式保修申请的期限。与产品缺陷相关的不同的保修期限请见下面的规格表。保修期限自您从授权经销商购买或收到（以后发生者为准）产品之日起算，以授权经销商的发票、销售收据或装箱单为证。如果您没有能够证明购买或接收日期的书面凭证，则保修期限自该产品出厂日三（3）个月后起算，以Monster的记录为证。保修期限于规格表中所列期限过期后或您将产品转让时终止，以先发生者为准。而且，您必须在发现(或应当发现，如果该产品缺陷显而易见)产品缺陷后二（2）个月内打电话给Monster来获得一个退货许可号（如"如何申请保修"所述）。

"您" 是指最初从授权经销商处购买原装产品的个人。本有限保修条款不适用于购买以下产品的个人或实体（i）已被使用过或没有包装，（ii）被转售、出租或用于其它商业用途，或（iii）并非来自授权经销商

本有限保修条款的范围

产品 如果一个产品在您从授权经销商处购得时存在产品缺陷，并且Monster在您发现(或应当发现，如果该产品缺陷显而易见)该产品缺陷后二（2）个月内收到您的正式保修申请，并且在该缺陷产品适用的保修期限终止之前，Monster将向您提供以下救济之一（1）由Monster自行决定修理或更换，或者（2）如果修理或更换在商业上无法实现或无法按时完成，退还您支付给授权经销商的购买该缺陷产品的价款。 注意：MONSTER在本有限保修条款项下不对任何偶然的、后果性的、或间接的损害承担任何责任。

一般条款

法律/管辖选择 本有限保修条款及任何由其产生或与其相关的纠纷（以下称"纠纷"）应当适用您购买产品所在管辖区域的法律。

其他权利 本有限保修条款授予您特定的法律权利，而且您也可能拥有其他权利，根据不同的地区和管辖区域而不同，这些权利不受本有限保修条款的影响。本有限保修条款只对您适用，而不得被转让或转移。如果本有限保修条款的任何条款违法，无效或无法实施，该条款应被视为可分割的并且不应影响其他条款的效力。如果本有限保修条款的英文版本与其他语言的版本存在任何不一致之处，以英文版本为准。

注册 请将您的产品在www.MonsterProducts.com.cn注册. 未能注册不会减损您在本有限保修条款项下的权利。

规格表

产品型号	产品保修期限
附带本保修条款之产品	产品已远销北美洲、南美洲和亚洲一（1）年之久 在欧洲和出售的产品保修两（2）年

正式保修申请

如何申请保修. 如果产品发生损坏，您必须遵循如下指示：（1）在您发现(或应当发现，如果该产品缺陷显而易见)产品缺陷后二（2）个月内电话通知Monster；（2）给出详细的关于损坏如何发生的解释；（3）获得一个退货许可号；（4）退还产品，由您预付运费（如果您在本有限保修的范围内有权获得救济，该笔费用将退还给您），由Monster来鉴定损坏，并附上您购买该产品的原始销售单据和购买凭证（统一商品条码或装箱单），填写完整的保修申请表，以及在退货包裹上印上退货许可号（保修申请表将包含退货指南）。

电话号码. 如果您是在美国，拉丁美洲 （Mexico 011-882-800-8989）， 或亚太地区购买的产品 (China 400-820-8973)， 请联系Monster, LLC （455 Valley Drive, Brisbane, CA 94005）at 1 877 800-8989. 如果您是在任何其他地方购买的产品，请联系 Monster Technology International Ltd., Ballymaley Business Park, Ennis, Co. Clare, Ireland. 您可以写信或拨打以下电话号码:

加拿大 866-348-4171	爱尔兰 353 65 68 69 354
奥地利 0800296482	比利时 0800-79201
捷克共和国 800-142471	丹麦 8088-2128
芬兰 800-112768	法国 0800-918201
德国 0800-1819388	希腊 00800-353-12008
意大利 800-871-479	荷兰 0800-0228919
挪威 800-10906	俄罗斯 810-800-20051353
西班牙 900-982-909	瑞典 020-792650
瑞士 0800834659	英国 0800-0569520

后续程序. Monster将确认是否存在产品缺陷。Monster可自行决定指导您在一个服务中心获取维修估价。如果您获得了维修估价，您将被指导如何恰当地将估价和维修发票提交Monster以获得赔偿。任何维修费用可能会被Monster议价。

时间. 如果您提出了正式保修申请并且完全遵守本有限保修条款的条款和条件，Monster将尽最大努力在收到您的保修申请之日起三十（30）天内向您提供救济（如果您在美国-如果您在其他地方，则四十五（45）天之内），除非由于不可抗力而延误。

版本. 071311 – 全球

©2003–2012 Monster, LLC

© 2012 Monster, LLC
7251 West Lake Mead Blvd. • Las Vegas, NV 89128
Monster Technology International, Ltd.
Ballymaley, Business Park • Gort Road, Ennis, Co. Clare, Ireland

"Monster," the Monster logo, Clarity HD Micro, Clarity HD Micro logo, the RoHS logo, Because The Music Matters, the product and packaging are trademarks or registered trademarks of Monster Cable Products, Inc. or its subsidiaries in the United States or other countries. Product may vary from images shown. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Monster, LLC is under license.

« Monster », le logo Monster, ClarityHD Micro, le logo ClarityHD Micro, le logo RoHS, Because The Music Matters, le produit et l'emballage sont des marques commerciales ou des marques déposées de Monster Cable Products, Inc. ou de ses filiales aux États-Unis et dans d'autres pays. Images non contractuelles. La marque et les logos sont la propriété de Bluetooth SIG, Inc. et l'usage de telles marques par Monster, LLC se fait sous licence.

RM 855705

MONSTER®

CLARITY HD MICRO™

HIGH-POWERED WIRELESS SPEAKER AND SPEAKERPHONE

Instructions and Warranty Information

Table of Contents

Package Contents 2

Micro Features and Controls 3

Compatibility and Safety 4

- Compatibility 4
- Safety 4
- LED Indicator 5
- General Specifications Table 5

Operation 6

- Turning the Micro On 6
- Multifunction Button 6
- Voice Commands 6
- Connecting via *Bluetooth*® Wireless Technology 7
- Connecting by Cable to MP3 Player 7
- Listen to Music 8
- Speakerphone Function 8
- Charging 9
- Replacing Front And Back Grilles 9

Voice Command Menu 10

- Main Menu 10
- Settings Menu 11
- Trigger Settings Menu 12
- Call Menu 12

Troubleshooting 13

Limited Warranty for Consumers 14

Package Contents

1. **ClarityHD Micro™**
   High-powered wireless speaker and speakerphone
2. **Carrying Strap**
3. **Protective Carrying Pouch**
4. **Power Adapter**
   with USB charging port
5. **Four Alternate AC Plugs**
6. **USB Micro Cable**

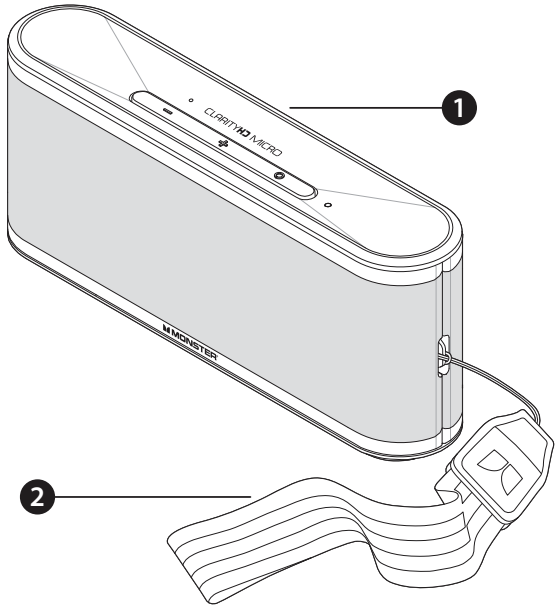

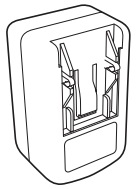

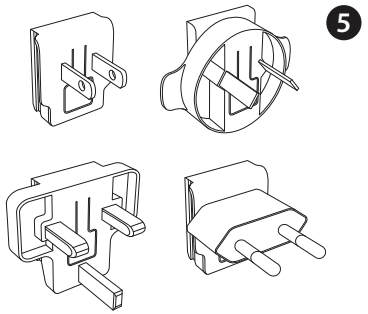

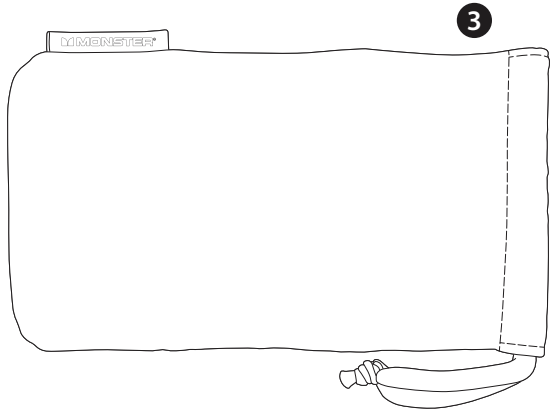

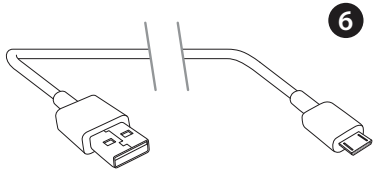

Micro Features and Controls

Top

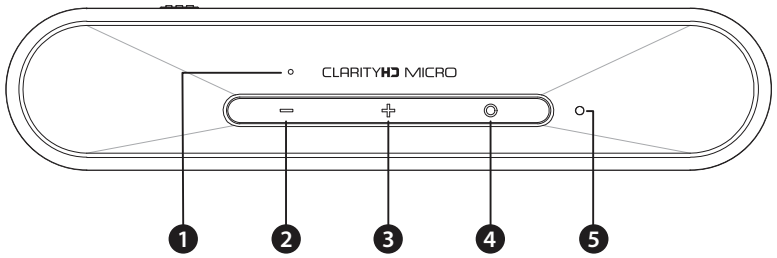

1. **Built-in microphone**
   For voice commands/ speakerphone use
2. **Volume down button**
   Decreases volume when pressed
3. **Volume up button**
   Increases volume when pressed
4. **Multifunction button**
   Activates voice command, pairing mode, and other functions
5. **LED Indicator light**
   Indicates mode and function of Micro
6. **Removable front and rear grilles**
   Optional grilles available at *MonsterProducts.com/products/clarityhdmicro*
7. **USB port**
   Connect to power adapter with USB micro cable to charge Micro
8. **Line In jack**
   Connect MP3 player external speaker to Monster® Micro with 3.5 mm cable
9. **Power switch**
   Turns Micro ON/OFF
10. **Recessed reset button**
    Use paper clip to press in the event of a system lockup

    Power switch must be ON to reset Micro

Front

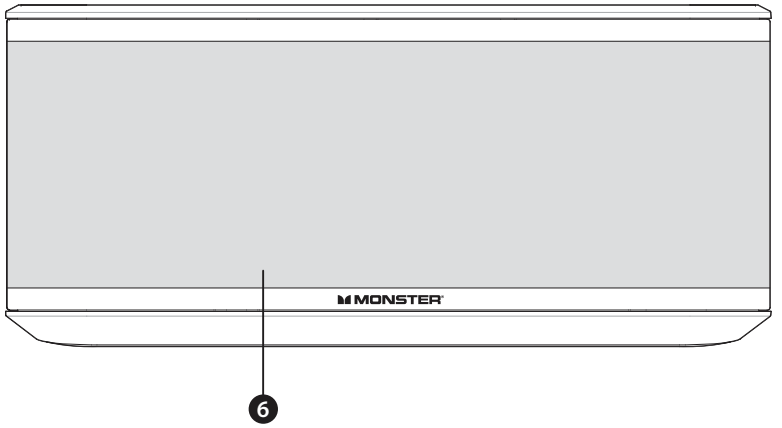

Back

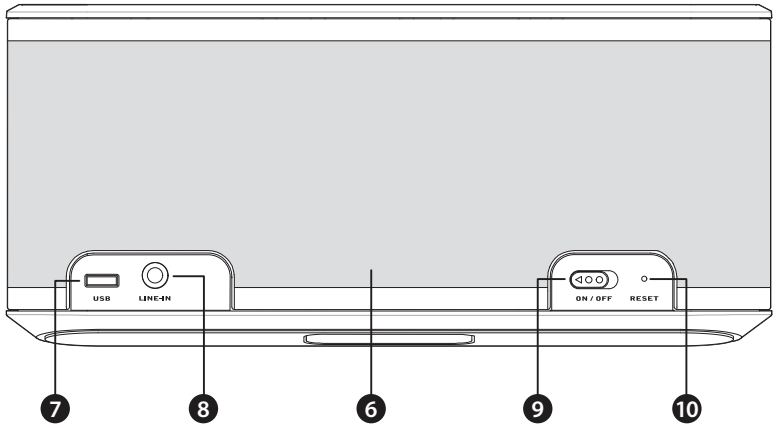

Compatibility and Safety

COMPATIBILITY

Wireless

Devices with *Bluetooth*® 2.0 wireless technology or above (See General Specifications for profiles), such as *Bluetooth* wireless technology equipped computers, and most *Bluetooth* wireless technology equipped smartphones and MP3 players.

Wired

Devices with a standard 3.5 mm headphone output port via 3.5 mm minijack cable (not included).

SAFETY

Do not leave the product exposed to a heat source or high temperatures.

Do not remove or attempt to remove the non-user-replaceable battery. When disposing of the product, take it to a waste electronics service.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire, or the like.

Caution: Danger of explosion if battery is incorrectly replaced. Batteries must be recycled or disposed of properly.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

FCC ID: RJE173209-00

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Changes or modification not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment. Connecting of peripherals requires the use of grounded shielded signal cables. The socket-outlet shall be installed near the equipment and shall be easily accessible.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Compatibility and Safety (continued)

Caution

Changes or modifications not expressly approved by the party responsible for compliance could void the user's (or your) authority to operate the equipment.

Avoid storage in extreme heat or cold. Avoid exposure to liquids, temperature extremes and high humidity. The product's working temperature range is 0–45°C (32–113°F).

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

LED INDICATOR

There is an LED light on the top of the Monster® Micro, just to the right of the Multi-Function button. Below are what the LED's various displays indicate.

Battery Mode:

Charging Indicator Lights

- **Battery Low**—Solid Red
- **Battery Very Low**—Flashing Red
- **Battery Charging**—Flashing Blue
- **Fully Charged**—LED Off (power OFF), Solid Blue (Power ON)

GENERAL SPECIFICATIONS	
AC Adapter	5V 2A
Dimensions	Width 181mm Height 81mm Depth 39 mm
Weight	390 g

Operation

TURNING THE MICRO ON

Note: The Micro comes with a lithium-ion battery that is approximately 30% charged. For best results, fully charge the Micro before use.

Power Switch

The Power Switch is located on the back of the Micro. Slide the switch to the ON position to turn on the Micro.

When the Micro is turned on, it automatically defaults to voice recognition mode and searches for the last *Bluetooth*® device to which it was paired.

MULTIFUNCTION BUTTON

Use the Multifunction button to enable voice control, set up *Bluetooth* pairing, play/pause music, and other functions. The Multifunction button will execute different commands depending what mode it is in and how long you hold the button down.

Short Press—Press and release

Double Press—Press twice and release

Long Press—Press and hold down for three (3) seconds and release

VOICE COMMANDS

The voice control system understands approximately 25 predetermined commands. Commands must be given exactly as they appear on pages 10–12, word for word.

Follow these steps to activate voice commands:

1. Slide the switch to the ON position to turn on the Micro.
2. By default, the Micro is not in voice command mode when you turn it on. Press and hold Volume Up and Volume Down buttons simultaneously to enable voice command features.
3. After the Micro connects to your device, Micro will say, "Your device is connected".
4. Say the trigger words, "Hello Monster Micro".
5. The Micro will respond with the prompt "Say a command".
6. For a reminder list of commands, respond with, "What can I say?"

CONNECTING VIA *BLUETOOTH*® WIRELESS TECHNOLOGY

If you are pairing the Micro and a *Bluetooth* wireless technology enabled device for the first time, follow these steps:

1. Press and hold down the Multifunction button.
2. Enable *Bluetooth* wireless technology on device.
3. Select "Monster Micro" on your *Bluetooth* wireless enabled device.

When the Micro is turned on, it automatically searches for the last *Bluetooth* enabled device to which it was paired.

Note: Older *Bluetooth*® 2.0 devices require a password. For *Bluetooth* 2.1 devices use **0000** as password.

Note: You can also pair the Micro with a *Bluetooth* device using voice commands. See page 10 for instructions.

CONNECTING BY CABLE TO MP3 PLAYER

Note: To prevent system error, turn off voice control while connecting via cable.

Micro can play music from an MP3 player, laptop, or other external music source that does not have wireless capability. Follow these steps to play:

1. Connect the music source to Micro using a 3.5 mm mini-jack cable (not included). Plug one end into the music source and the other end into the Line In jack on the back of Micro.
2. Micro automatically searches for the last *Bluetooth* device paired to it. You must disconnect the *Bluetooth* device that was last paired to the Micro to allow MP3 player music to play on Micro.

LISTEN TO MUSIC

Play/Pause
Multifunction Button—Short press

Increase Volume
Volume Up Button—Long press

Decrease Volume
Volume Down Button—Long press

Next Track
Volume Up Button—Short press

Previous Track
Volume Down Button—Short press

Disconnect *Bluetooth*® Connected Devices
Multifunction Button—Long press

When connected via *Bluetooth* wireless technology, control the music from your device.

SPEAKERPHONE FUNCTION

Micro also functions as a wireless speakerphone and includes a built-in microphone.

Incoming Call

Answer Call, Pause Music
Multifunction Button—Short press

Reject Call
Multifunction Button—Long press

During Call

Hang Up, Resume Music
Multifunction Button—Short press

Toggle Between Mobile Device and Micro
Multifunction Button—Long press

Answer 3rd Party Call/Put Original Call on Hold
Multifunction Button—Double press

Mute Microphone
Volume Up and Volume Down Buttons—
Short press both buttons simultaneously

Unmute Microphone
Volume Up *or* Volume Down Button—Short press

Increase Volume, Unmute Microphone
Volume Up Button—Long press

Increase Volume, Unmute Microphone
Volume Up Button—Long press

Operation (continued)

CHARGING

Monster Micro comes with a lithium-ion battery. For best results, fully charge the Micro before use.

To charge, connect the USB micro cable to the power adapter. Four sets of plug prongs are included for worldwide use. Connect appropriate prongs to adapter and connect to USB cable Monster® Micro.

To install plug prongs, slide the appropriate prongs over the adapter until it clicks in the locked position. To remove plug prongs, press the tab in the center of the plug prongs and slide up.

Charging Indicator Lights

- **Battery Low**—Solid Red
- **Battery Very Low**—Flashing Red
- **Battery Charging**—Flashing Blue
- **Fully Charged**—LED Off (Power OFF), Solid Blue (Power ON)

Caution

Battery is not user replaceable. Danger of explosion if battery is incorrectly replaced. Batteries must be recycled or disposed of properly.

Install Plug Prongs:

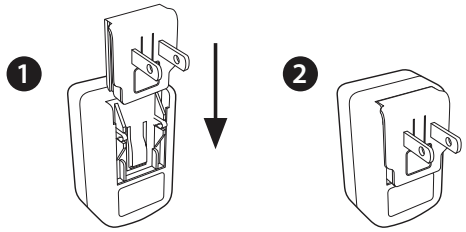

Remove Plug Prongs:

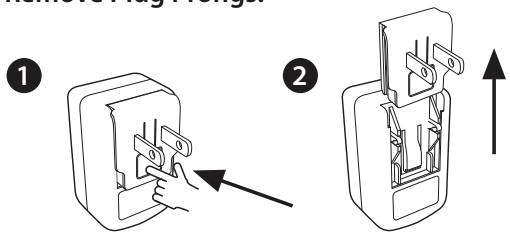

REPLACING FRONT AND BACK GRILLES

A selection of replacement grilles is available at **MonsterProducts.com/products/clarityhdmicro**

Both front and back grilles are attached to the Micro with magnets. To remove grille, pull up from one end and the grille will detach. Set replacement grille on to the Micro and the magnets will pull it into place.

Voice Command Menu

MAIN MENU

Always say the trigger word "Hello Monster Micro".
Micro will answer with "Say a Command", then state the command you want.

"Pair Mode" *	**"Check Battery"**	**"Cancel"**
Activates pairing mode	Indicates Micro battery level	Cancels previous command
"Am I Connected?"	**"Redial" ***	**"What Can I Say"**
Indicates connection status	Redials the last dialed number	Complete list of Main Menu voice commands
"Phone Command"	**"Call Back" ***	**"Settings Menu"**
Activates voice command feature on phone	Calls back the last person who called you	Takes you to Settings Menu (see page 11)
	"Call Voice Mail" *	
	Calls voice mail	

* After stating certain menu commands, the Micro will ask you to verify your selection and prompt you to speak a **"Yes"** or **"No"** response before executing the command.

Voice Command Menu (continued)

SETTINGS MENU

"Say a Command Prompt" *

Activates/deactivates
Micro Voice Prompt function

"Incoming Call Announcement" *

Activates/deactivates incoming caller ID name

"Voice Control Help"

Provides helpful tips for using
voice recognition technology

"Cancel"

Exits Settings Menu and returns to Main Menu

"What Can I Say?"

Micro recites complete list of
Settings Menu commands

"Turn Off Voice Control" *

Disables Voice Control. Re-enable
by following steps on page 6

"Hands-Free Trigger"

Takes you to Trigger Settings
(see page 12)

* After stating certain menu commands, the Micro will ask you to verify your selection and prompt you to speak a **"Yes"** or **"No"** response before executing the command.

Voice Command Menu (continued)

TRIGGER SETTINGS MENU

"Trigger Always On"	"Trigger Off"	"What Can I Say?"
Sets Micro to listen for Trigger Word at all times	Sets Micro to never listen for Trigger Word	Micro recites complete list of Trigger Settings Menu commands
"Battery Saving Trigger"	**"Cancel"**	
Sets Micro to listen for Trigger Word for two minutes before going into standby mode	Exits Trigger Settings Menu and returns to Main Menu	

CALL MENU
After Micro announces the incoming call

"Answer"	"Ignore"
Answers incoming call	Rejects incoming call

Troubleshooting

	SYMPTOM	REMEDY
TROUBLESHOOTING	**Micro does not power up**	• Make sure lithium-ion battery is charged up • If using power adapter, make sure all connections are firm
	***BlueTooth*® device paired, but no music plays**	• Turn volume up to maximum level on both Micro and *Bluetooth* device
	***BlueTooth* signal is weak or drops out**	• Move Micro and Bluetooth device closer together—pairing range is approximately 30 feet and can be impaired by multiple walls • Turn off Micro and *BlueTooth* device and reconnect
	MP3 player is connected via 3.5mm cable, but no music plays	• Make sure that Micro is not paired to a *BlueTooth* device—a *BlueTooth* connection overrides a device connected by cable
	Micro is in speakerphone mode, but no sound comes out	• Confirm that your *BlueTooth* device supports all profiles
	Micro does not respond to either voice or button commands	• Use paper clip to press recessed reset button on back of Micro while speaker is turned on

Limited Warranty for Consumers

Monster, LLC, 7251 West Lake Mead Blvd., Las Vegas, NV 89128, USA, **[PLEASE NOTE THAT MONSTER DOES NOT ACCEPT PRODUCTS SHIPPED TO THIS ADDRESS—FOLLOW INSTRUCTIONS IN "HOW TO MAKE A CLAIM" BELOW]** (415) 840-2000 ("Monster") extends You this Limited Warranty. Statutory or common law may provide You with additional rights or remedies, which shall not be affected by this Limited Warranty.

DEFINITIONS

"Adequate Use" means use of the Product (i) within a home or dwelling, (ii) for private (as opposed to commercial) purposes, (iii) in conformance with all applicable law, code or regulations (including without limitation building and/or electrical codes), (iv) in accordance with manufacturer recommendations and/or instructions in the materials and documentation that accompany the Product, and (v) if applicable, with proper electrical grounding.

"Authorized Dealer" means any distributor, reseller or retailer that (i) was duly authorized to do business in the jurisdiction where it sold the Product to You, (ii) was permitted to sell You the Product under the laws of the jurisdiction where You bought the Product, and (iii) sold You the Product new and in its original packaging.

"Formal Warranty Claim" means a claim made in accordance with the section "Formal Warranty Claims" herein.

"Product" means a Product (i) that is listed in the Specifications Table below, (ii) that You bought from an Authorized Dealer new and in its original packaging, and (iii) whose serial number, if any, has not been removed, altered, or defaced.

"Product Defect" means an inadequacy of the Product that existed at the time when You received the Product from an Authorized Dealer and that causes a failure of the Product to perform in accordance with Monster's documentation accompanying the Product, unless such failure has been caused completely or partly by (a) any use other than Adequate Use, (b) transportation, neglect, misuse or abuse by anyone other than Monster's employees; (c) alteration, tampering or modification of the product by anyone other than a Monster employee; (d) accident (other than a malfunction that would otherwise qualify as a Product Defect); (e) maintenance or service of the Product by anyone other than a Monster employee; (f) exposure of the Product to heat, bright light, sun, liquids, sand or other contaminants; or (g) acts outside the control of Monster, including without limitation acts of God, fire, storms, earthquake or flood.

"Warranty Period" means the time period during which Monster must have received Your Formal Warranty Claim. The different Warranty Periods related to Product Defects are defined in the Specifications Table below. The Warranty Period commences on the date when You purchased or received (whichever occurs later) the Product from an Authorized Dealer as evidenced by the Authorized Dealer's invoice, sales receipt or packing slip. If You do not have written proof of the date of purchase or receipt, then the Warranty Period commences three (3) months after the date when the Product left Monster's or its factory as evidenced by Monster's records. The Warranty Period ends after the time defined in the Specifications Table has expired or after You have transferred ownership of the Product, whichever occurs earlier. Also, You must call Monster and obtain a Return Authorization Number (as described under "How to Make a Claim") within two (2) months after You discover a Product Defect (or should have discovered it, if such Product Defect was obvious).

Limited Warranty for Consumers (continued)

"You" means the first individual person that purchased the Product in its original packaging from an Authorized Dealer. This Limited Warranty does not apply to persons or entities that bought the Product (i) in used or unpackaged form, (ii) for resale, lease or other commercial use, or (iii) from someone other than an Authorized Dealer.

SCOPE OF THIS LIMITED WARRANTY

PRODUCTS. If a Product contained a Product Defect when You bought it from an Authorized Dealer and Monster receives a Formal Warranty Claim from You within two (2) months after You discover such Product Defect (or should have discovered it, if such Product Defect was obvious) and before the end of the Warranty Period for Product Defects applicable to the affected Product, then Monster will provide You with one of the following remedies: Monster will (1) repair or, at Monster's sole discretion, replace the Product, or (2) refund to You the purchase price You paid to the Authorized Dealer for the affected Product if repair or replacement is not commercially practicable or cannot be timely made. NOTE: MONSTER DOES NOT ASSUME ANY LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES UNDER THIS LIMITED WARRANTY.

GENERAL PROVISIONS

CHOICE OF LAW/JURISDICTION. This Limited Warranty and any disputes arising out of or in connection with this Limited Warranty ("Disputes") shall be governed by the laws of the jurisdiction where You bought the Product.

OTHER RIGHTS. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM JURISDICTION TO JURISDICTION, AND WHICH SHALL NOT BE AFFECTED BY THIS LIMITED WARRANTY. THIS WARRANTY EXTENDS ONLY TO YOU AND CANNOT BE TRANSFERRED OR ASSIGNED. If any provision of this Limited Warranty is unlawful, void or unenforceable, that provision shall be deemed severable and shall not affect any remaining provisions. In case of any inconsistency between the English and other versions of this Limited Warranty, the English version shall prevail.

REGISTRATION. Please register Your Product at www.MonsterProducts.com. Failure to register will not diminish Your warranty rights.

SPECIFICATIONS TABLE

Product Model	Warranty Period for Product
Product that accompanies this warranty statement	One (1) year for product sold in North America, South America and Asia Two (2) years for product sold in Europe

FORMAL WARRANTY CLAIM

HOW TO MAKE A CLAIM. In the event damage has occurred to Products, You must follow these instructions: (1) Call Monster within two (2) months after You discover a Product Defect (or should have discovered it, if such Product Defect was obvious); (2) Give a detailed explanation of how the damage occurred; (3) Obtain a Return Authorization Number; (4) Return the Products, shipping prepaid by You (to be refunded if You are entitled to a remedy under the Scope of this Limited Warranty), to Monster for verification of damage, along with a copy of **Your original sales receipts and proof of purchase** (UPC label or packing slip) for such Products, the completed claim form, and printed Return Authorization Number on the outside of the return package (the claim form will include instructions for return).

Limited Warranty for Consumers (continued)

TELEPHONE NUMBERS. If You bought the Product in the United States, Latin America (Mexico 011-882-800-8989), or Asia Pacific (China 400-820-8973), contact Monster, LLC (455 Valley Drive, Brisbane, CA 94005) at 1 877 800-8989. If You bought the Product anywhere else, contact Monster Technology International Ltd., Ballymaley Business Park, Ennis, Co. Clare, Ireland. You can write or use one of the following telephone numbers: Canada 866-348-4171, Ireland 353 65 68 69 354, Austria 0800296482, Belgium 0800-79201, Czech Republic 800-142471, Denmark 8088-2128, Finland 800-112768, France 0800-918201, Germany 0800-1819388, Greece 00800-353-12008, Italy 800-871-479, Netherlands 0800-0228919, Norway 800-10906, Russia 810-800-20051353, Spain 900-982-909, Sweden 020-792650, Switzerland 0800834659, United Kingdom 0800-0569520.

FURTHER PROCEEDINGS. Monster will determine whether a Product Defect existed. Monster may, at its discretion, direct You to obtain a repair estimate at a service center. If a repair estimate is required, You will be instructed on how to properly submit the estimate and the resulting invoice to Monster for payment. Any fees for repairs may be negotiated by Monster.

TIMING. If You bring a Formal Warranty Claim and fully comply with all terms and conditions of this Limited Warranty, Monster will use its best efforts to provide You with a remedy within thirty (30) days after receipt of Your Formal Warranty Claim (if You reside in the United States—forty-five (45) days if You reside elsewhere), unless obstacles outside Monster's control delay the process.

Ver.071311—GLOBAL ©2012 Monster, LLC

©2012 Monster, LLC
Monster Technology International, Ltd

"Monster," the Monster logo, ClarityHD Micro, ClarityHD Micro logo, the product and packaging are trademarks or registered trademarks of Monster Cable Products, Inc. or its subsidiaries in the United States or other countries. Product may vary from images shown.
The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Monster, LLC is under license.

MONSTER® MICRO™

HERE ARE SOME HELPFUL TIPS FOR GETTING TO KNOW YOUR MICRO

GETTING STARTED

Make sure your fully charge your Micro. The first time you power up a new Micro it will simply turn on - the power switch is on the rear. Micro will emit a turn-on tone.

TO PAIR TO YOUR DEVICE

After you power up your Micro, press and hold the multi-function button "O" on the top of the Micro. The LED will flash red to blue and you will hear a sonar sound. You can then release the button. Enable the Bluetooth function on your device just like you would to pair a wireless headset. Look for "Monster Micro" on your device and select it to connect. You will hear voice prompts to guide you until this process is finished. It may continue for a few seconds after you connect.

Micro will say "your device is connected" and emit a chime tone.

After the initial connection, each time you turn on your Micro it will seek the last device it was connected to. If the device is turned on and in range it will connect automatically. Micro will narrate the process and emit a chime tone when completed.

Please wait for the pairing process or the re-connect process to complete before operating the Micro.

HOW TO USE THE VOICE COMMANDS

Micro comes with voice commands off. To activate voice commands, hold + and – buttons together for about 5 seconds. Micro will say "the voice command is on".

To turn off voice commands repeat the process – Micro will say "the voice command is off".

You will still get voice acknowledgments of certain functions at all times – these are not part of the voice commands.

Say the trigger word "HELLO MONSTER MICRO" before EVERY voice command.
This is designed so that you can't accidentally give micro a command to do something. Micro will NOT respond without the trigger command first.

When Micro says "say a command" pause for a heartbeat before you issue the command. Speak clearly, and normally, you do not have to yell.

For a list of commands, when Micro says "say a command" respond with "what can I say" and Micro will recite the list of commands for you.

Always wait until Micro finishes talking before issuing a command.
When using micro "give it time" to complete its cycles. When you trigger the voice command, pause for a heartbeat before you give it a voice command.

Remember that micro cannot listen and talk at the same time – if you talk to micro while it is talking it will not understand.

Make sure you turn the music off before attempting voice commands.
Micro will NOT respond to the trigger if you do not stop the music on your device first. When you stop the music, wait a few seconds for the Bluetooth to disengage. Micro will emit a chime tone to let you know. Occasionally in voice command mode you can trigger the Micro's voice command without realizing it. Anytime someone says "Monster Micro" in conversation it can trigger the voice command and Micro will say "say a command" That is what it supposed to do – it is not an error.

Non American English Accents and voice commands.
We have done a great deal of testing to make Micro as reliable as possible but we can't guarantee that it will recognize all accents. Speak in a normal conversational voice for best results.

PLAYING MUSIC

Start your music and press and hold the volume up button on your Micro. Micro will make a "tick" sound so you know when you are all the way up. Then you can control the volume from your device.

BUTTON FUNCTIONS

Micros buttons perform many functions.
When playing music the buttons on Micro control the music as well as the volume.
For volume you must PRESS AND HOLD the + or – buttons
A quick press on the O (multifunction) button is play/pause
A quick press on the + will advance the track
A quick press on the – will restart the track or go to the previous track

The meaning of the LED colors.
Flashing Blue - (when plugged in to charger or computer) – charging
Solid Blue – (when not plugged in and charging) - On
Red – battery low
Flashing red – battery EXTREMELY low
Red/Blue rapid flash – pairing mode
Blue when playing music – SBC Bluetooth Codec active
Green when playing music – AAC Codec active
Purple when playing music – apt-X Codec active

For more information and videos about Monster Micro – visit our website.

http://www.monstercable.com/headphones/clarityHD/

MONSTER®

English

Information to consumers in application of EU WEEE Directive 96/2002
This product is subject to European Union regulations that promote the re-use and recycling of used electrical and electronic equipment. This product required the extraction and use of natural resources and may contain hazardous substances. The symbol above, on the product or on its packaging, indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service, or the store from which you purchased the product. For more information about Monster products, please visit us at: **www.MonsterCable.com.**

Français

Informations destinées aux consommateurs conformément à la Directive Européenne 96/2002 concernant les Déchets d'Équipements Électriques et Électroniques (DEEE)
Ce produit est soumis aux règles en vigueur dans l'Union Européenne promouvant la réutilisation et le recyclage des déchets d'équipements électriques et électroniques. Ce produit a requis l'extraction et l'utilisation de ressources naturelles et peut contenir des substances dangereuses. Le symbole ci-dessus, apposé sur le produit ou sur son emballage, indique que ce produit ne peut être jeter avec votre déchet ménager. Au contraire, il est de votre responsabilité de traiter vos déchets d'équipements en les remettant à un centre de collecte des déchets chargé du recyclage des déchets d'équipements électriques et électroniques. La reprise et le recyclage séparés de vos déchets d'équipements au moment de la mise au rebut aideront à conserver les ressources naturelles et à assurer qu'ils soient recyclés d'une manière protégeant la santé publique et l'environnement. Pour obtenir de plus amples informations au sujet de l'endroit de reprise et de collecte de vos déchets d'équipements pour le recyclage, veuillez vous adresser au bureau compétent de votre commune, à la société de collecte des déchets ou directement auprès du magasin où vous avez acheté le produit en question. Pour obtenir de plus amples informations sur les produits Monster, veuillez visiter notre site à l'adresse suivante: **www.MonsterCable.com.**

Nederlands

Informatie voor de consumenten in uitvoering van de Europese Richtlijn 2002/96/EG inzake afgedankte elektrische en elektronisch apparatuur (AEEA).
Dit product valt onder het toepassingsgebied van de Europese richtlijnen die het hergebruik en de recycling van gebruikte elektrische en elektronische apparaten promoten. Het product vereist de ontginning en gebruik van natuurlijke bronnen en kan gevaarlijke stoffen bevatten. Het hierboven of afgebeelde symbool op het product of op de verpakking, geeft aan dat het niet mag worden weggegooid met het gewone huisvuil. In plaats daarvan is het uw verantwoordelijkheid uw afgedankte apparaat af te leveren op een verzamelpunt voor recycling van elektrische en elektronische apparaten. De gescheiden inzameling en recycling van afgedankte apparaten draagt bij tot het behoud van natuurlijke bronnen en tot het hergebruik van materiaal op een manier die de volksgezondheid en het leefmilieu beschermt. Voor meer informatie over waar u uw afgedankte apparatuur kunt inleveren voor recycling, kunt u contact opnemen met de gemeente, het uw huishoudelijke afvalophaaldienst of de winkel waar u het product heeft aangeschaft. Voor meer informatie met betrekking tot producten van Monster, kunt u terecht op de website **www.MonsterCable.com.**

Español

Información al consumidor en aplicación de la Directiva Comunitaria RAEE 96/2002 (sobre Residuos de Aparatos Eléctricos y Electrónicos)
Este producto está sujeto al reglamento de la Unión Europea que promueve la reutilización y reciclaje de aparatos eléctricos y electrónicos usados. Este producto puede contener sustancias peligrosas, y la extracción y utilización de recursos naturales fue necesaria para su fabricación. El símbolo que aparece al inicio, si figura en el producto o en su envase, indica que este producto no debe eliminarse junto con el resto de sus residuos doméstico. Así que es responsabilidad de los consumidores deshacerse de sus aparatos depositándolos en un punto de recogida designado para el reciclaje de aparatos eléctricos o electrónicos. La recogida selectiva y reciclaje de los residuos de sus aparatos en el momento de su eliminación contribuye a la conservación de los recursos naturales y garantiza su reciclaje de forma que se proteja la salud de las personas y el medio ambiente. Para obtener más información sobre los puntos de recogida de residuos eléctricos y electrónicos para su reciclaje, póngase en contacto con su ayuntamiento, con el servicio de eliminación de residuos domésticos, o con el establecimiento en el que adquirió el producto. Para obtener más información sobre los productos Monster, visite nuestra página web: **www.MonsterCable.com.**

Italiano

Informazioni al consumatore in applicazione della Direttiva UE WEEE 96/2002
Questo prodotto è soggetto alla regolamentazione europea che promuove il recupero ed il riciclo di apparecchi elettrici ed elettronici usati. Questo prodotto richiede l'estrazione e l'impiego di risorse naturali e può contenere sostanze pericolose. Il simbolo sopra, posto sul prodotto stesso o sull'imballaggio, indica che il prodotto non può essere gettato assieme agli altri rifiuti comuni. Al contrario, è responsabilità del consumatore eliminare il prodotto consegnandolo ad un punto di raccolta designato per il riciclo di apparecchi elettrici ed elettronici. La raccolta separata ed il riciclo di questo rifiuto elettrico, al momento della raccolta, aiuterà a conservare le risorse naturali e ad assicurare un corretto riciclo, al fine di preservare la salute umana e l'ambiente. Per maggiori informazioni circa dove consegnare i rifiuti elettrici ai fini del riciclo, si prega di contattare l'ufficio della propria città, il servizio di gestione di rifiuti, o il negozio dove si è acquistato il prodotto. Per maggiori informazioni sui prodotti Monster, si prega di visitare il sito: **www.MonsterCable.com.**

Polski

Informacja dla konsumentów w zwi zku z obowi zywaniem Dyrektywy 2002/96/WE
Niniejszy produkt podlega regulacjom prawnym Unii Europejskiej promuj cym ponowne u ycie i recykling zu ytego sprz tu elektrycznego i elektronicznego. Wytworzenie produktu wymagało skorzystania z surowców naturalnych naszej planety; ponadto, produkt mo e zawiera substancje niebezpieczne. Symbol umieszczony powy ej, na produkcie, oraz na jego opakowaniu, wskazuje, e zu yty produkt nie mo e zosta wyrzucony wraz z innymi odpadami i mieciami powstaj cymi w gospodarstwie domowym, przeciwnie: jako nabywcy i u ytkownicy, s Pa stwo odpowiedzialni za przekazanie zu ytego produktu do wyspecjalizowanego punktu zbierania zu ytego sprz tu elektrycznego i elektronicznego. Selekcjonowanie sprz tu ju w momencie zako czenia jego u ywania oraz pó niejszy recykling sprz tu przyczyni si do zachowania surowców naturalnych i zapewni, e zu yty sprz t elektryczny i elektroniczny podlega b dzie recyklingowi prowadzonemu w sposób bezpieczny dla zdrowia ludzi oraz przyjazny dla rodowiska. W celu uzyskania informacji o adresach puktów, do których mo na przekaza zu yty sprz t elektryczny i elektroniczny, prosimy o skontaktowanie si ze swoim urz dem gminy lub miasta, przedsi biorstwem zajmuj cym si wywozem mieci, albo ze sklepem, w którym sprzedany został niniejszy produkt. Wi cej informacji o produktach Monster mog Pa stwo uzyska na stronie: **www.MonsterCable.com.**

Magyar

Felhasználói tájékoztató az Elektronikus és Elektronikai Hulladékokról szóló 96/2002/EK Irányelv alkalmazásáról
Ez a termék az Európai Unió használt elektronikus és elektronikai készülékek újrahasználatának és újrahasznosításának el mozdítását célzó rendelkezéseinek hatálya alá esik. Ez a termék természeti er források kitermelését és felhasználását igényelte és veszélyes anyagokat tartalmazhat. A fenti jel, mely a terméken vagy annak csomagolásán szerepel, azt jelöli, hogy a terméket tilos egyéb háztartási hulladékkal együtt kidobni. Ezzel szemben az Ön felel ssége, hogy gondoskodjon a használt készülékének megfelel kezelésér l, azáltal, hogy átadja azt egy kijelölt gy jt helyen az elektronikus és elektronikai készülék újrahasznosítása érdekében. A használt készülékek külön gy jtése és újrahasznosítása a természeti er források meg rzését szolgálja, és egyben biztosítja, hogy olyan módon kerüljenek a készülékek újrahasznosításra, amely védi az emberi egészséget és a környezetet. Arra vonatkozó további információért, hogy hol adhatja le használt termékét annak érdekében, hogy az újrahasznosításra kerüljön, kérjük, keresse fel a helyi önkormányzatot, a háztartási hulladék eltávolítását végz szolgáltatót vagy az üzletet, amelyben a terméket vásárolta. Amennyiben további információra van szüksége a Monster termékekr l, keresse fel honlapunkat: **www.MonsterCable.com.**

Cesky

Informace pro spot ebitele p i uplat ování Sm rnice Evropského parlamentu a Rady 2002/96/ES o odpadních elektrických a elektronických za ízeních
Tento výrobek podléhá p edpis m Evropské Unie, které se vztahují na op tovné použití a recyklaci použitých elektrických a elektronických za ízení. K výrob tohoto výrobku bylo nutné využít p írodních zdroj . Tento výrobek m že obsahovat nebezpe né látky. Výše uvedený symbol umíst ný na výrobku nebo na jeho obalu znamená, že daný výrobek nesmí být odstran n s ostatním odpadem pocházejícím z Vaší domácnosti. Je Vaší povinností toto elektroza ízení odevzdat na ur ené sb rné místo k recyklaci elektroodpadu. Odd lený sb r a recyklace elektroodpadu p i jeho odstran ní napom že zachování p írodních zdroj a zajistí, aby recyklace prob hla zp sobem, který chrání lidské zdraví a životní prost edí. Podrobné údaje o tom, kde elektroodpad m žete odevzdat k recyklaci, získáte na p íslušném ú adu místní samosprávy, u spole nosti zajišťující zpracování odpadu z domácností nebo v obchod , kde jste daný výrobek zakoupili. Více informací o výrobcích Monster získáte na internetových stránkách: **www.MonsterCable.com.**

Slovensky

Informácie pre spotrebite ov pri uplat ovaní Smernice Európskeho parlamentu a Rady 2002/96/ES o odpade z elektrických a elektronických zariadení
Tento výrobok podlieha predpisom Európskej únie, ktoré sa vz ahujú na opätovné použitie a recykláciu použitých elektrických a elektronických zariadení. K výrobe tohto výrobku bolo nutné využi prírodných zdrojov. Tento výrobok môže obsahova nebezpe né látky. Hore uvedený symbol umiestnený na výrobku alebo na jeho obale znamená, že daný výrobok nesmie by zneškodnený spolo ne s ostatným odpadom pochádzajúcim z Vašej domácnosti. Je Vašou povinnos ou toto elektrozariadenie odovzda na urené zberné miesto k recyklácii elektroodpadu. Oddelený zber a recyklácia elektroodpadu pri jeho zneškod ovaní napomôže zachovaniu prírodných zdrojov a zabezpe í, aby recyklácia prebehla spôsobom, ktorý chráni udské zdravie a životné prostredie. Podrobné údaje o tom, kde elektroodpad môžete odovzda k recyklácii, získate na príslušnom úrade miestnej samosprávy, u spolo nosti zabezpe ujúcej spracovanie odpadu z domácností alebo v obchode, kde ste daný výrobok zakúpili. Viac informácií o výrobkoch Monster získate na internetových stránkach: **www.MonsterCable.com.**

Deutsch

Verbraucherinformation in Anwendung der EU-Richtlinie über Elektro- und Elektronik-Altgeräte 96/2002

Dieses Produkt unterliegt Bestimmungen der Europäischen Union, die die Wiederverwendung und das Recycling von gebrauchten Elektro- und Elektronikgeräten fördern. Dieses Produkt erforderte die Gewinnung und Verwendung von natürlichen Ressourcen und enthält unter Umständen gefährliche Stoffe. Das oben abgebildete Symbol auf dem Produkt oder der Verpackung bedeutet, dass dieses Produkt nicht mit Ihrem anderen Haushaltsabfall entsorgt werden darf. Statt dessen sind Sie dafür verantwortlich, Ihr Altgerät zu entsorgen, indem Sie es an eine designierte Rücknahmestelle für das Recycling von Elektro- und Elektronik-Altgeräten übergeben. Die separate Sammlung und das Recycling Ihrer Altgeräte bei der Entsorgung wird dazu beitragen, natürliche Ressourcen zu erhalten und sicherzustellen, dass die Geräte in einer Weise recycelt werden, die die Gesundheit der Menschen und die Umwelt schützt. Für weitere Informationen darüber, wo Sie Ihre Altgeräte zum Recycling abgeben können, wenden Sie sich bitte an Ihre Gemeinde, Ihre Haushaltsabfallentsorgungsstelle oder das Geschäft, wo Sie das Produkt erworben haben. Für weitere Informationen über Monster-Produkte, besuchen Sie uns bitte auf **www.MonsterCable.com.**

Ελληνικά

Πληροφορίες στους καταναλωτές κατ' εφαρμογή της Οδηγίας 2002/96/ΕΚ σχετικά με τα απόβλητα ειδών ηλεκτρικού και ηλεκτρονικού εξοπλισμού (ΑΗΗΕ)

Αυτό το προϊόν υπόκειται στους κανόνες της Ευρωπαϊκής Ένωσης οι οποίοι προωθούν την αξιοποίηση και ανακύκλωση του μεταχειρισμένου ηλεκτρικού και ηλεκτρονικού εξοπλισμού. Για αυτό το προϊόν απαιτήθηκε η εξαγωγή και χρησιμοποίηση φυσικών πόρων και σε αυτό μπορεί να περιέχονται επικίνδυνα συστατικά. Το παραπάνω σύμβολο, επάνω στο προϊόν ή στη συσκευασία του, υποδεικνύει ότι αυτό το προϊόν δεν πρέπει να διατίθεται μαζί με τα υπόλοιπα οικιακά απόβλητα. Αντ' αυτού, αποτελεί δική σας ευθύνη η διάθεση των αποβλήτων ειδών ηλεκτρικού και ηλεκτρονικού εξοπλισμού σας, παραδίδοντάς τα σε ειδικό σημείο συλλογής για την ανακύκλωση των αποβλήτων ειδών ηλεκτρικού και ηλεκτρονικού εξοπλισμού. Η ξεχωριστή συλλογή και ανακύκλωση των αποβλήτων ειδών ηλεκτρικού και ηλεκτρονικού εξοπλισμού σας την ώρα της διάθεσης θα βοηθήσει τη διατήρηση των φυσικών πόρων και θα εξασφαλίσει την ανακύκλωσή τους με τέτοιο τρόπο ώστε να προστατευθεί η ανθρώπινη υγεία και το περιβάλλον. Για περισσότερες πληροφορίες σχετικά με το πού μπορείτε να παραδώσετε τα απόβλητα ειδών ηλεκτρικού και ηλεκτρονικού εξοπλισμού σας προς ανακύκλωση, παρακαλώ επικοινωνήστε με το αρμόδιο τοπικό γραφείο, την υπηρεσία διάθεσης οικιακών αποβλήτων ή το κατάστημα από το οποίο προμηθευτήκατε το προϊόν. Για περισσότερες πληροφορίες σχετικά με τα προϊόντα Monster, παρακαλώ επισκεφθείτε μας στην ηλεκτρονική διεύθυνση **www.MonsterCable.com**.

Lietuviu Kalba

Informacija vartotojams apie ES Direktyvos 2002/96/EB d l elektros ir elektronin s rangos atliek (EE A) taikym

Šiam gaminiui taikomi ES reikalavimai, skatinantys panaudotos elektros ir elektronin s rangos pakartotin panaudojim ir perdirbim . Šio produkto gamybai yra panaudoti išgauti gamtiniai ištekliai, taip pat jo sud tyje gali b ti pavojing medžiag . Aukš iau pateiktas simbolis ant paties gaminio arba ant jo pakuot s rodo, kad šio gaminio negalima išmesti kartu su kitomis buitin mis atliekomis. J s patys atsakote už tai, kad J s elektros ir elektronin s rangos atliekos b t perduotos perdirbimui tam skirtus surinkimo punktus. Atskiras J s išmetamos rangos atliek surinkimas ir perdirbimas pad s išsaugoti gamtinius išteklius ir užtikrins, kad jos bus perdirbamos žmoni sveikatai ir aplinkai saugiu b du. Papildomos informacijos apie tai, kur galite palikti savo rangos atliekas perdirbimui, prašome teirautis savo miesto seni nijoje, buitini atliek šalinimo tarnyboje, arba parduotuv je, kurioje pirkote gamin. Daugiau informacijos apie „Monster" prekes ieškokite internete: **www.MonsterCable.com.**

Norsk

Informasjon til forbrukere i henhold til EU-direktiv 96/2002

Dette produktet er underlagt virkeområdet for EU-regelverk som oppfordrer til gjenbruk og resirkulering av brukt elektrisk og elektronisk utstyr. Fremstilling av dette produktet har gjort det nødvendig å utvinne og bruke naturressurser som kan være skadelige. Det ovenstående symbolet, på produktet eller på pakningen, betyr at produktet ikke må kastes sammen med annet husholdningsavfall. I stedet er det ditt ansvar å innlevere brukt utstyr som skal kastes til et mottakssted for brukt elektrisk og elektronisk utstyr. Innsamling og resirkulering av ditt brukte elektriske og elektroniske utstyr som skal kastes vil bidra til vern av naturressursene og sikre at utstyret resirkuleres på en måte som hindrer helsekader og skader på miljøet. For mer informasjon om hvor du kan levere brukt utstyr for resirkulering, kan du kontakte din lokale kommune eller forhandleren der du kjøpte produktet. For mer informasjon om Monster-produktene, se **www.MonsterCable.com**.

MONSTER®

MonsterCable.com

© 2006 Monster Cable Products, Inc.

455 Vally Drive • Brisbane, CA 94005, USA • 1-877-800-8989

Monster Cable International Ltd.
Ballymaley Business Park
Gort Road, Ennis, Co. Clare, Ireland • 001-866-348-4171

rm 876430

A Note about Monster Micro from the Head Monster

Thank you and congratulations on your purchase of Monster Micro. Unlike any wireless portable speaker & speakerphone made, Monster Micro offers advances in technology and new levels of sonic performance never achievable until now.

ADVANCED WIRELESS TECHNOLOGIES LET YOU HEAR ALL THE MUSIC

Monster has always been passionately devoted to providing our customers with the most exciting and inspiring audio experiences possible. We've dedicated ourselves to making the music in your collection sound as real and fresh as it did in the studio when the artist created it. That's why we included the most advanced wireless technologies like AAC and apt-X in the Micro to give you the finest audio experience possible. And it all happens automatically. There's nothing you have to do but enjoy the music.

VOICE COMMAND MAKES MICRO TRULY HAND-SFREE

To make Micro fun and entertaining, we invite you interact with your Micro with it's revolutionary voice command feature. You can do things like answer calls, check the battery level, find out if you are connected - all hands free with just the sound of your voice.

PERSONALIZE THE MICRO WITH OPTIONAL INTERCHANGEABLE GRILLES

Who says technology can't be sexy? The Micro is clad – front and back – with precision-engineered grills that magnetically adhere and release with fingertip control. When the mood moves you...snap on a new look in exciting colors, patterns and materials. It's a whole new Micro in an instant.

GET TO KNOW YOUR MICRO

Micro is so jam packed with features and technology you will want to take some time to get to know all the cool things it can do. Take a look at the tips and tricks enclosure to help you get the hang of how to interact with your Micro. Once you do, you will enjoy an amazing audio experience any where you go. Remember, Micro is updateable, so check the Monster website for more information about Micro and look for updates to make your Micro even better. And while you're there, don't forget to take a look at the Micro videos to get even more enjoyment from your Micro.

MONSTEROUSLY,

NOEL LEE,
HEAD MONSTER

Une note à propos de Monster Micro par le Head Monster

Merci et félicitations d'avoir acheté le Monster Micro. À la différence des autres haut-parleurs portables sans fil, Monster Micro s'impose par ses avancées technologiques et des niveaux de performance sonore encore jamais atteints.

LA TECHNOLOGIE SANS FIL AVANCÉE VOUS FAIT PROFITER DE TOUTE LA MUSIQUE

Monster s'est investi depuis toujours avec passion pour offrir à ses clients les expériences audio les plus excitantes et les plus inspirantes qui soient. Nous faisons le maximum pour que la musique de votre répertoire produise un effet aussi réel et original que dans le studio où l'artiste l'a enregistrée. C'est pourquoi nous avons intégré dans Micro les technologies sans fil les plus avancées, comme AAC et apt-X, afin de vous faire vivre l'expérience audio la plus intense. Et tout cela, automatiquement. Il vous suffit juste de profiter de la musique!

AVEC LA COMMANDE VOCALE, MICRO EST RÉELLEMENT MAINS LIBRES

Pour que votre Micro soit à la fois plaisant et impressionnant, nous vous invitons à interagir avec lui grâce à sa commande vocale révolutionnaire. Vous pouvez, par exemple, répondre à des appels, vérifier le niveau de la batterie, savoir si vous êtes connecté... tout cela entièrement en mains libres, juste au son de votre voix.

PERSONNALISEZ LE MICRO AVEC LES GRILLES INTERCHANGEABLES EN OPTION

Qui prétend que la technologie ne peut pas être sexy ? Les faces avant et arrière de Micro sont habillées de grilles conçues avec précision, qui adhèrent magnétiquement et s'enlèvent du bout des doigts. Laissez-vous guider par votre humeur... appliquez un nouveau look avec des couleurs, des motifs et des matériaux excitants. Votre Micro change de style en un instant.

SACHEZ UTILISER VOTRE MICRO

Nous avons mis dans MIcro tellement d'équipements et de technologies qu'il vous faudra un peu de temps pour découvrir toutes les choses sympathiques qu'il est capable de faire. Jetez un œil sur la liste des trucs et astuces qui vous est fournie pour maîtriser rapidement la manière d'interagir avec lui. Vous pourrez alors profiter d'une expérience audio extraordinaire où que vous alliez. Rappelez-vous : Micro peut être mis à jour. Consultez régulièrement le site web Monster pour plus d'information sur Micro et recherchez les mises à jour pour améliorer encore ses possibilités. Et tant que vous y êtes, n'oubliez pas de visionner les vidéos qui lui sont dédiées pour profiter encore plus de votre Micro.

MONSTRUEUSEMENT VÔTRE,

NOEL LEE,
LE HEAD MONSTER

m 879820